

Below-the-ceiling Mounting Instructions

Applies to all omni PEAR™ antennas

STEP 1 - Marking antenna center and mounting holes

- Insert threaded rods into the base plate of the antenna
- Place antenna over desired installation spot and mark lightly:
 - Three 3/16" or 5.0 mm holes for the threaded rods
 - Center of the antenna



STEP 2 - Drill 3/16" or 5mm holes and center hole


- Drill three 3/16" or 5.0 mm according to markings in step 1
- Use Table 1 as an antenna and center hole diameter reference
- Drill or cut out the center hole

Table 1 - Center Hole Diameter

Antenna Model	Center hole diameter
PEAR M4936i / M4772	5" or 120 mm
PEAR M4773	4" or 100 mm
PEAR M4969i	5" or 120 mm
PEAR S4935i / S5491i	3" or 75 mm
PEAR S4934	3" or 70 mm

STEP 3 - Attach antenna to ceiling

- Use the provided hardware to mount the antenna to the ceiling
- Mount antenna to ceiling as shown in Detail A

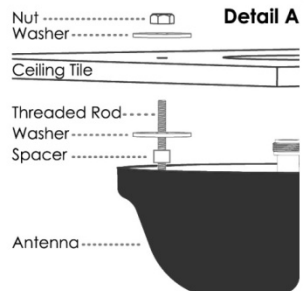

Release Date: 20. Sept. 2013. Rev. A